




Making a perfect wet applicaton of 3M™ Scotchcal™ Clear View Graphic Film 8150 | Step 1:

Prepare the surface:

Spray water with detergent (soap) on complete application area.



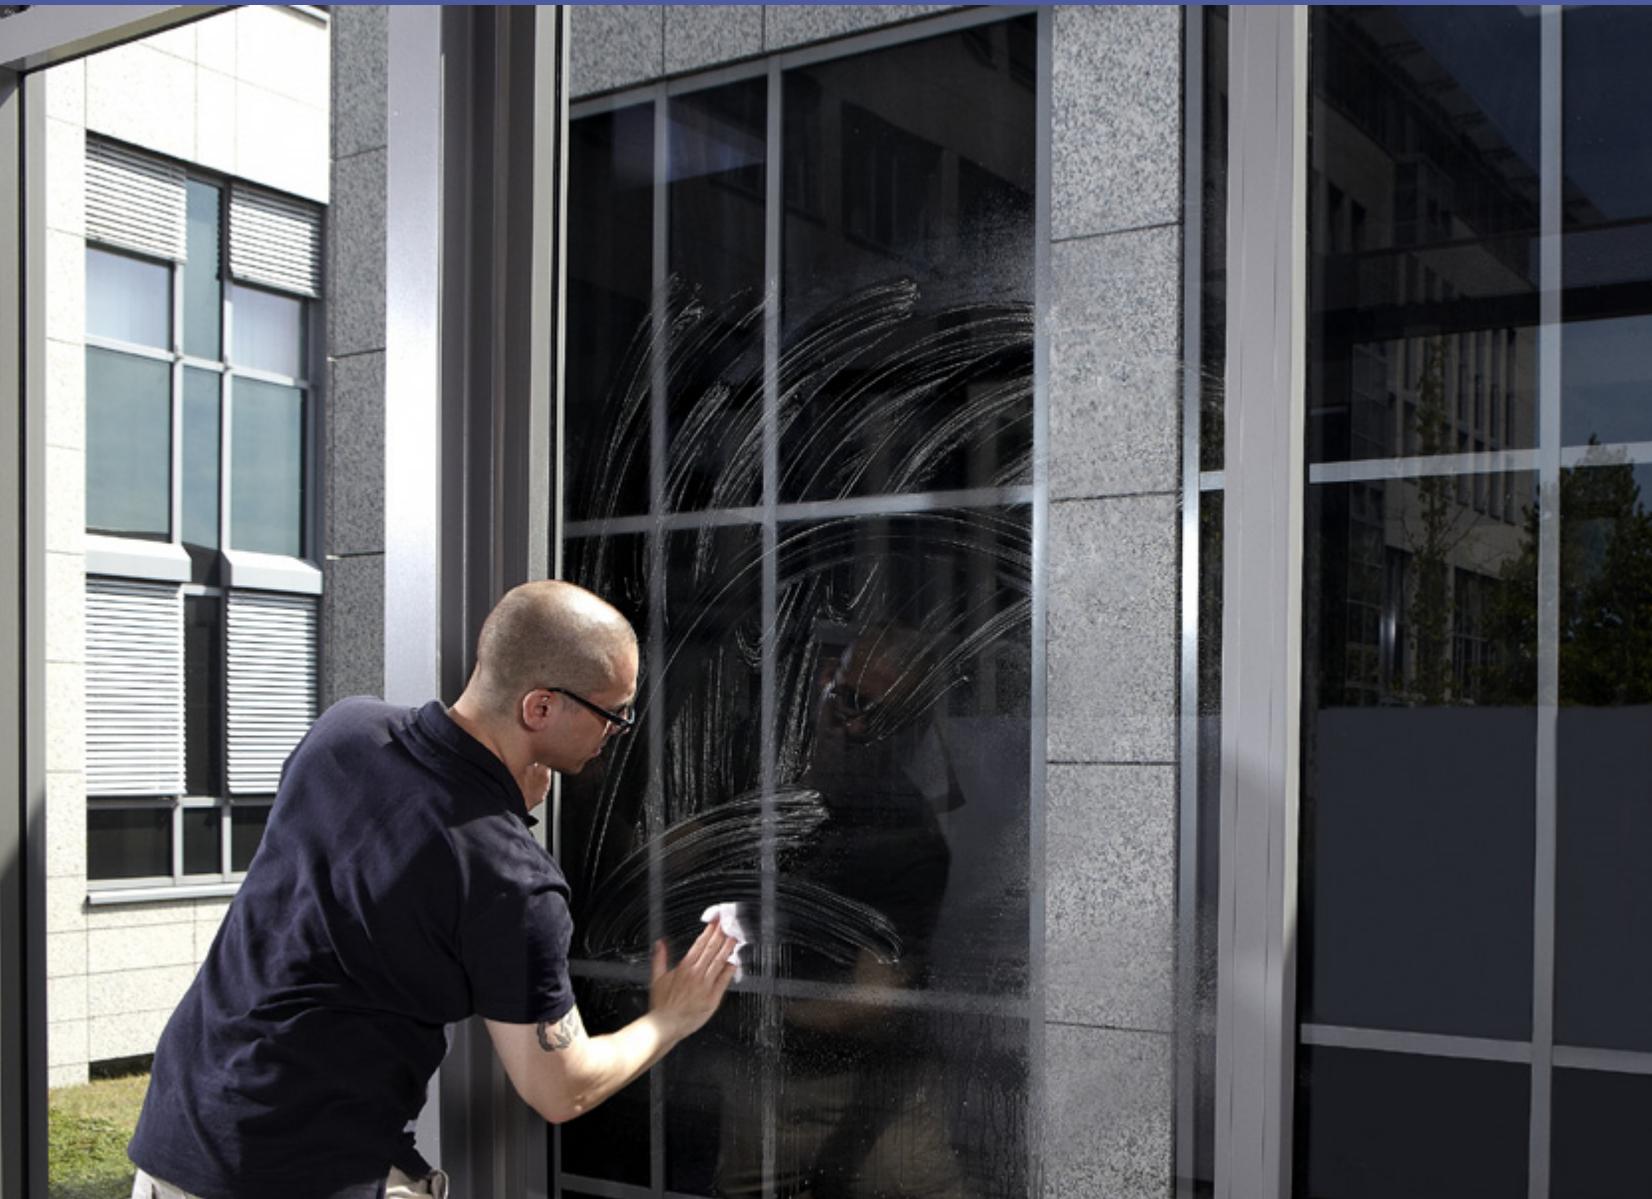

Making a perfect wet applicaton of 3M™ Scotchcal™ Clear View Graphic Film 8150 | Step 2:

Prepare the surface:

Wipe the wet window with a towel to remove dirt particles. No need to wipe the window dry.






Making a perfect wet applicator of 3M™ Scotchcal™ Clear View Graphic Film 8150 | Step 3:

Prepare the surface:

Spray the detergent water again on complete application area.



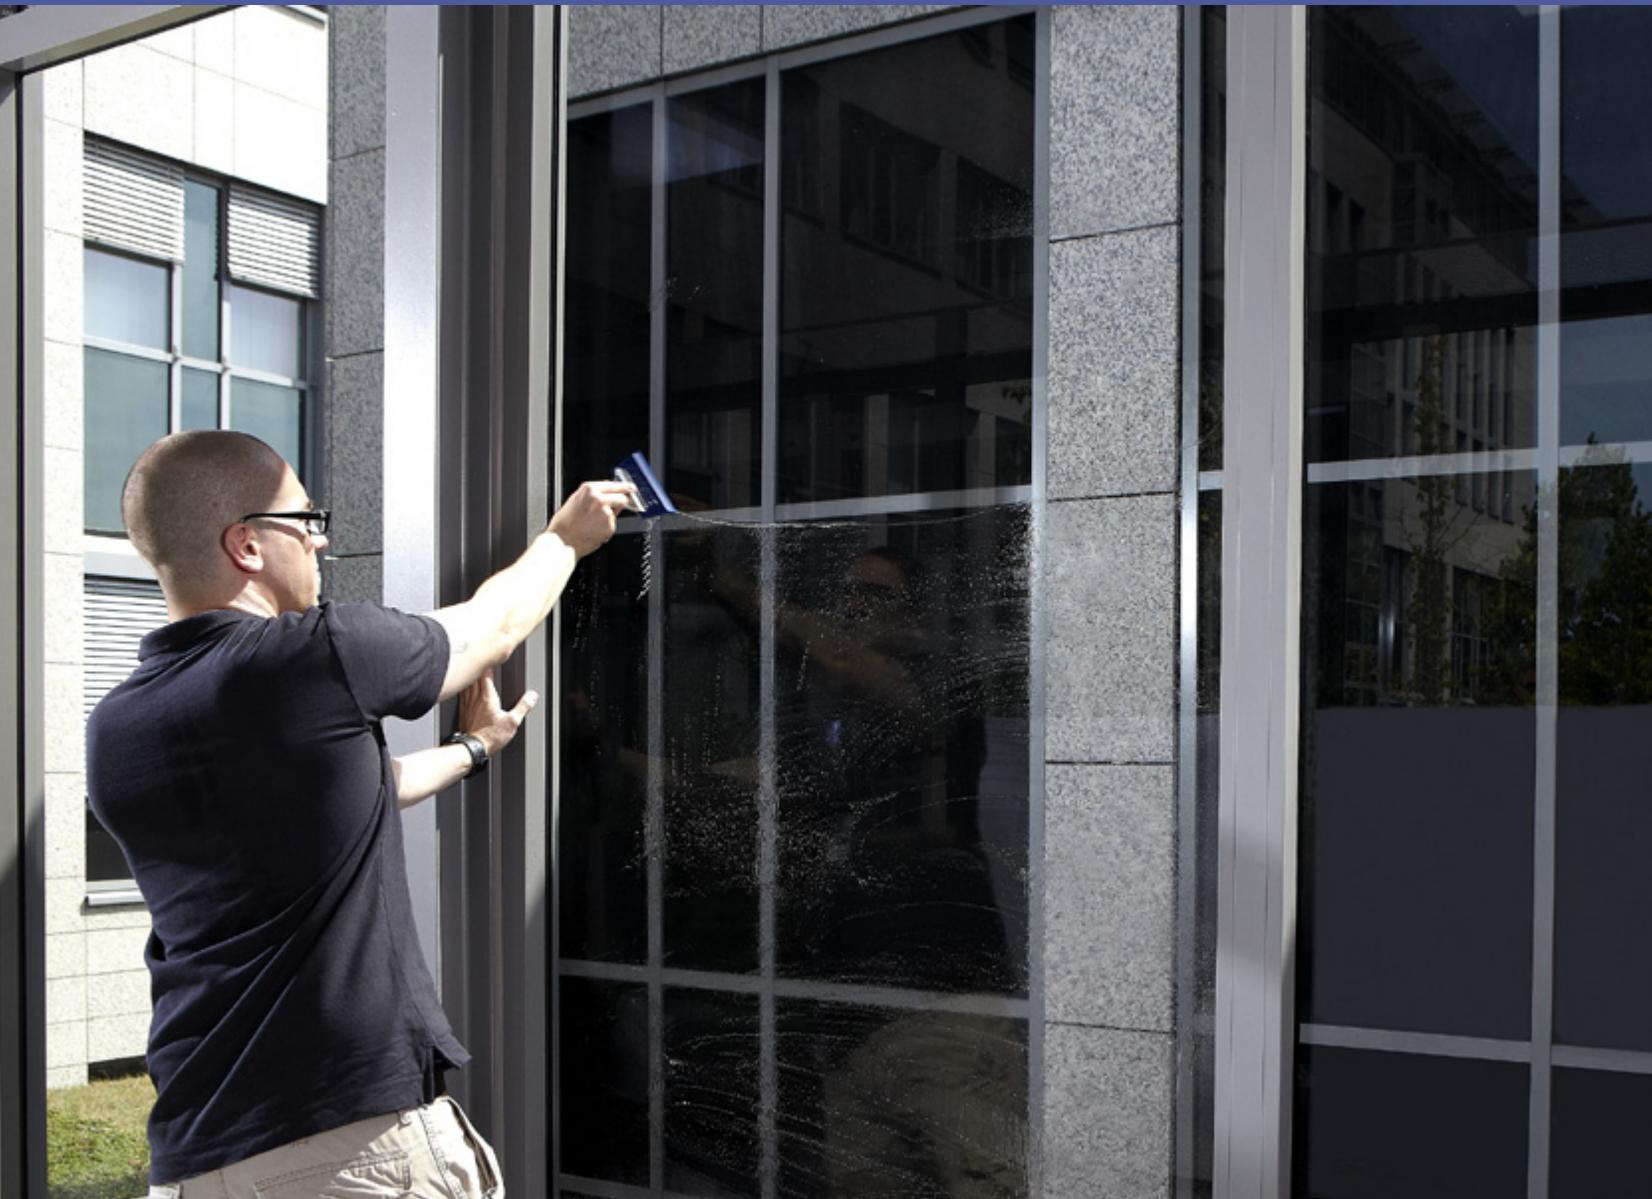

Making a perfect wet applicaton of 3M™ Scotchcal™ Clear View Graphic Film 8150 | Step 4:

Prepare the surface:

Remove the water with a squeegee. Squeeze tight to clean the window from lubrications.





Making a perfect wet applicator of 3M™ Scotchcal™ Clear View Graphic Film 8150 | Step 5:

Prepare graphic installation:

Spray detergent water on a window next to the application area ...





Making a perfect wet applicator of 3M™ Scotchcal™ Clear View Graphic Film 8150 | Step 6:

Prepare graphic installation:  
... and stick the graphic backside (liner) up.





Making a perfect wet applicaton of 3M™ Scotchcal™ Clear View Graphic Film 8150 | Step 7:

Prepare graphic installation:

Remove the liner. During removal spray detergent water onto the now facing up adhesive.





Making a perfect wet applicaton of 3M™ Scotchcal™ Clear View Graphic Film 8150 | Step 8:

Prepare graphic installation:  
Continous spraying onto the adhesive during liner removal.





Making a perfect wet applicator of 3M™ Scotchcal™ Clear View Graphic Film 8150 | Step 9:

Install graphic:  
Spray the detergent water onto complete application area.






Making a perfect wet applicaton of 3M™ Scotchcal™ Clear View Graphic Film 8150 | Step 10:

Install graphic:  
Pick the graphic from the window ...



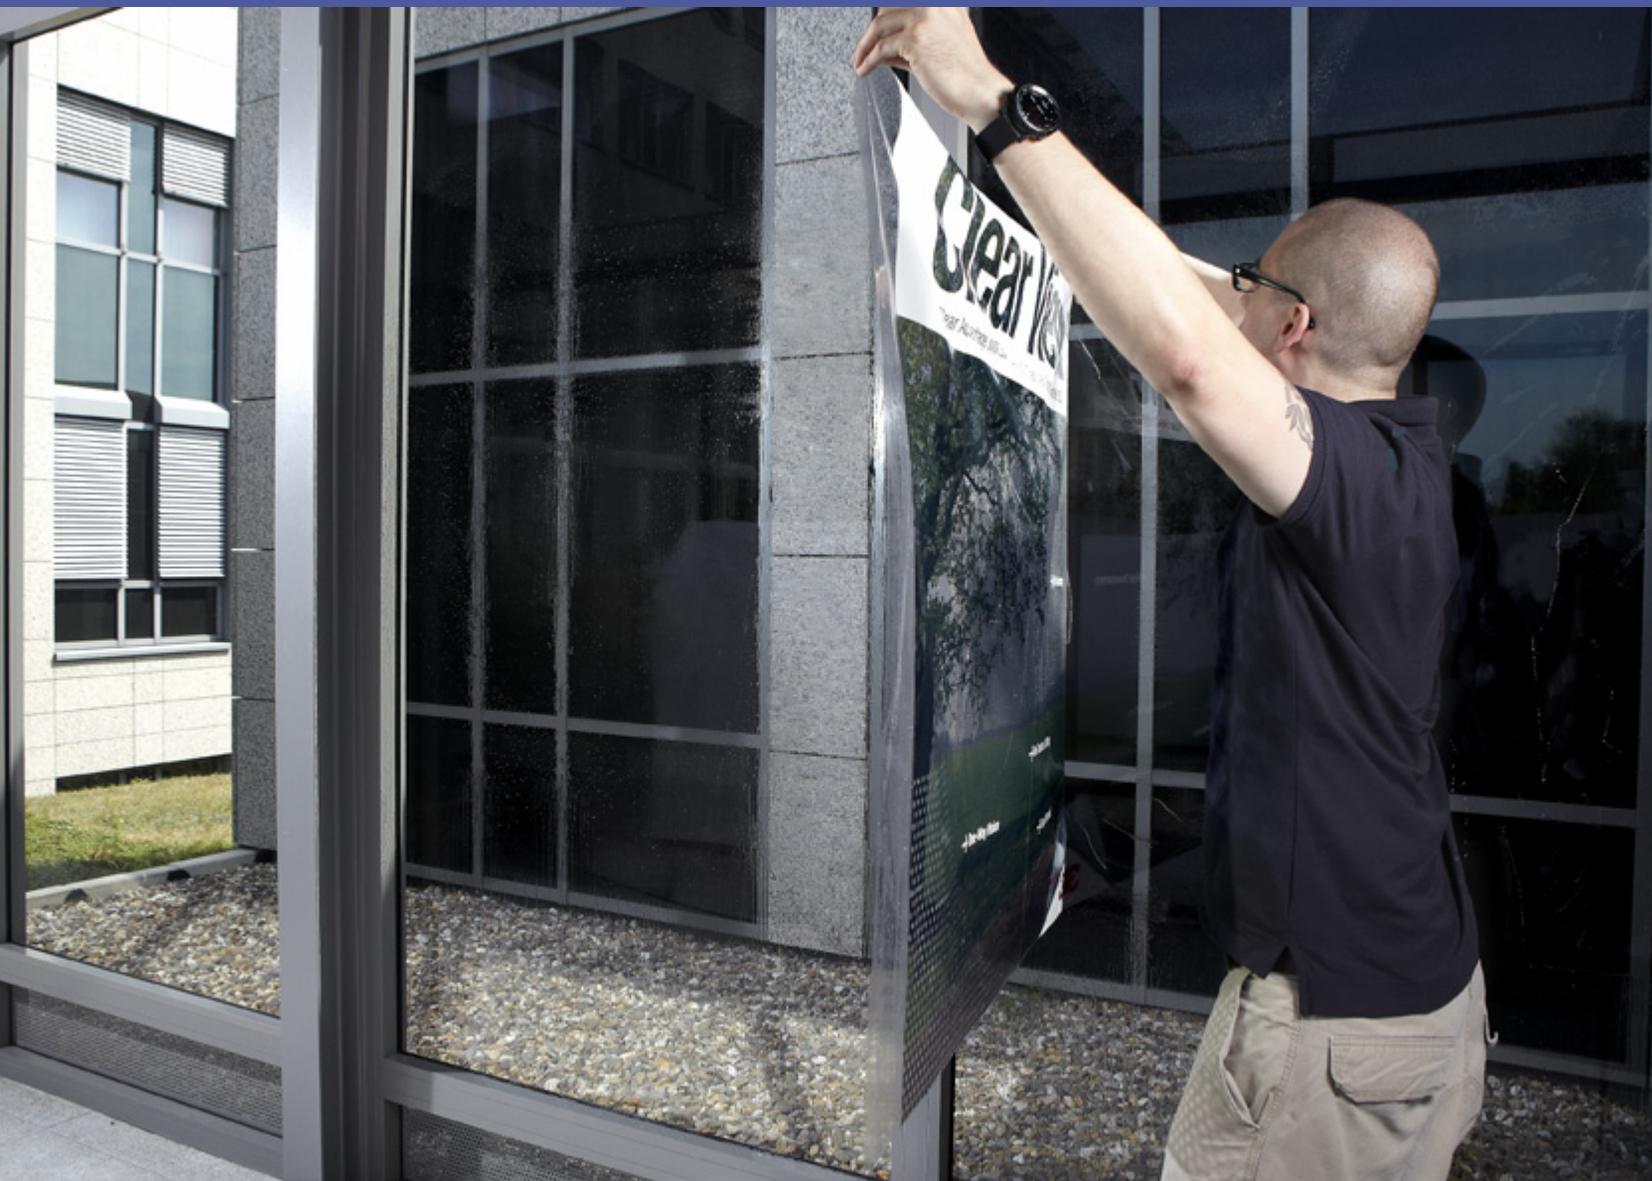

Making a perfect wet applicaton of 3M™ Scotchcal™ Clear View Graphic Film 8150 | Step 11:

Install graphic:  
... turn it. And ...





Making a perfect wet applicaton of 3M™ Scotchcal™ Clear View Graphic Film 8150 | Step 12:

Install graphic:  
... position it on the application surface.





Making a perfect wet applicaton of 3M™ Scotchcal™ Clear View Graphic Film 8150 | Step 13:

Install graphic:  
Spray detergent water onto graphic. This is for scratch prevention!





Making a perfect wet applicator of 3M™ Scotchcal™ Clear View Graphic Film 8150 | Step 14:

Install graphic:

Starting from the center squeeze first horizontal and then vertical to fix graphic position.





Making a perfect wet applicaton of 3M™ Scotchcal™ Clear View Graphic Film 8150 | Step 15:

Install graphic:  
Spray again detergent water onto graphic. And always when you rework already applied areas.





Making a perfect wet applicator of 3M™ Scotchcal™ Clear View Graphic Film 8150 | Step 16:

Install graphic:

Squeeze the water out. Always start from the center to the different directions.





Making a perfect wet applicator of 3M™ Scotchcal™ Clear View Graphic Film 8150 | Step 17:

Install graphic:  
Finished! Now ...





Making a perfect wet applicaton of 3M™ Scotchcal™ Clear View Graphic Film 8150 | Step 18:

Post work:

... spray again some detergent water on the graphic and ...





Making a perfect wet applicator of 3M™ Scotchcal™ Clear View Graphic Film 8150 | Step 19:

Post work:  
... clean the graphic with a towel.





Making a perfect wet applicator of 3M™ Scotchcal™ Clear View Graphic Film 8150 | Step 20:

GOOD JOB!!

